

### CLONING CABLES

**OPC-478UC** **OPC-966U**  
**OPC-1122U** **OPC-1862**  
**OPC-2338** **OPC-2344**

### IMPORTANT

 
**READ ALL INSTRUCTIONS** carefully and thoroughly before using the cloning cable.

**SAVE THESE INSTRUCTIONS!** — These instructions contain important safety and operating details for the cloning cable.

### EXPLICIT DEFINITIONS

WORD	DEFINITION
<b>CAUTION</b>	Equipment damage may occur.
<b>NOTE</b>	If disregarded, inconvenience only. No risk of personal injury, fire or electric shock.

### SUPPLIED ITEMS

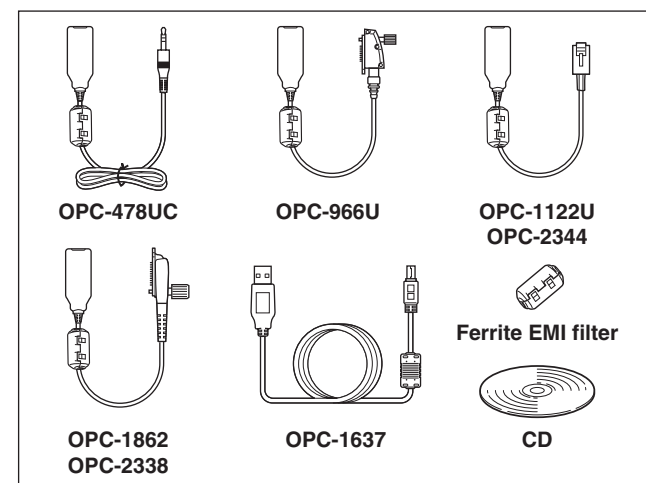

**IMPORTANT:** Some Icom cloning software can only select ports 1 to 4. When several peripheral equipment, such as a printer, scanner and hard-disk drive are connected to the USB port, the port number available for the cloning software may be port 5 or higher. Therefore, you cannot choose the proper port number.

Thank you for purchasing one of the OPC-478UC/OPC-966U/OPC-1122U/OPC-1862/OPC-2338/OPC-2344 CLONING CABLE. The cloning cables are designed to connect an Icom transceiver/receiver and a PC for data cloning using Icom cloning software. Please read these instructions thoroughly before using the cloning cable.

### PRECAUTIONS

**CAUTION: USE ONLY INDOORS! NEVER** expose the cloning cables to rain, snow or any liquids.

**NEVER** let metal, wire, or other objects touch any internal part of the connectors.

**CAUTION: NEVER** use a USB cable other than the OPC-1637. **DO NOT** extend the USB cable. When the cable longer than 1.5 m (4.9 ft) is used, a data error may occur.

**DO NOT** use harsh solvents such as benzine or alcohol when cleaning, as they will damage the cables.

Ensure that your PC supports USB port operation by confirming the Universal Serial Bus controller is in the PC's Device Manager.

Connect the cloning cable to the PC's USB port directly, or to a self-powered USB hub.

Approximately 20 mA of current is required for the cloning cable. Insufficient current capacity of the USB port can cause unstable cloning operation and a data error.

**CAUTION:**  
 Install the USB driver before you connect the cloning cables to the PC.  
 Never connect the cloning cables to the PC until the USB driver installation has been completed.  
 If you have connected the cables, remove it and then install the USB driver.

### ◇ Cloning software compatibility

 
The USB type cloning cables, OPC-478UC/OPC-966U/OPC-1122U, are almost the same as the RS-232C type cloning cables, OPC-478/OPC-966/OPC-1122. Therefore, most of the Icom cloning software which require the RS-232C type cables can be used with USB type cables.

### SPECIFICATIONS

- Usable temperature range:  
 OPC-2338/OPC-2344 0°C to +60°C (+32°F to +140°F)  
 Others -10°C to +60°C (+14°F to +140°F)
- Cable length (approximately):  
 OPC-478UC 520 mm (20.5 inches)  
 Others 250 mm (9.8 inches)  
 OPC-1637 (USB cable) 1500 mm (4.9 feet)
- Weight (approximately):  
 OPC-478UC 40 g (1.4 oz)  
 OPC-966U 54 g (1.9 oz)  
 OPC-1122U/OPC-2344 34 g (1.2oz)  
 OPC-1862/OPC-2338 57 g (2.0 oz)  
 OPC-1637 (USB cable) 49 g (1.7 oz)

### USB DRIVER INSTALLATION (STEP 1)

- When installing the USB driver, log in as the **administrator**.
  - These instructions are based on using Windows 8.
  - The displayed dialog boxes, indications or operations may differ slightly from the following instructions, depending on your operating system, system settings and its service pack level.
- Make sure Windows has completed its start-up, and no other applications are running.
  - Insert the supplied CD into the CD drive.
  - Double click "ICOM USB DriverInstaller\_B.exe" contained in the CD.
    - When "User Account Control" appears, click [Yes] to continue.
  - "User Account Control" appears. Click "Yes" to start the USB driver installation.
  - "Welcome to the InstallShield Wizard for ICOM USB-to serial Ver. B" appears. Click [Next >] to begin the installation.
  - If "Windows Security" appears, click "Install".

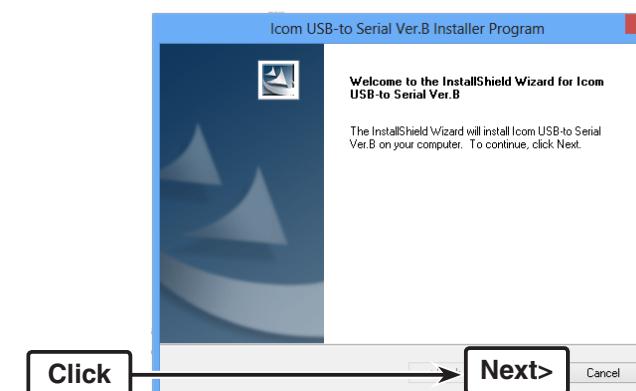


### SYSTEM REQUIREMENTS

#### A PC with the following is required:

- Microsoft® Windows® 8.1 32 bit/64 bit
- Microsoft® Windows® 8 32 bit/64 bit
- Microsoft® Windows® 7 32 bit/64 bit
- Microsoft® Windows Vista® 32 bit/64 bit
- A USB 1.1 or 2.0 port

/// The USB driver cannot be used with "RT" versions of Microsoft® Windows® 8.1 and Microsoft® Windows® 8.

 - After the installation has completed, "InstallShield Wizard Complete" appears. Click [Finish].

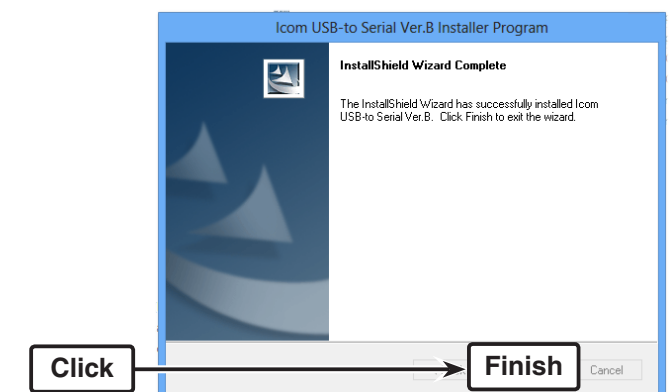


**NOTE:**  
 After the USB driver installation has been completed (Step 1), connect the cloning cable to the PC (Step 2).

## CABLE CONNECTION (STEP 2)

 After completing Step 1, connect the cloning cable to the PC, then the PC automatically starts the USB-to-Serial Comm Port installation.

- ① Connect the cloning cable to the USB cable, and then the USB cable to the PC's USB port, as illustrated below.
  - Attach the Ferrite EMI filter to the strain relief of the USB cable.

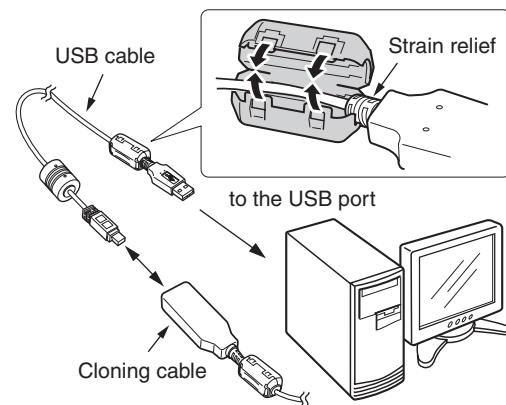


- ② The status is displayed at the bottom of the desktop screen. Wait a moment until it disappears.



Shows the status

**For your information:** If the status is clicked, the “Installing Icom USB-to-Serial Comm Port (COM\*)” dialog is displayed.

 - “\*” is the number of the COM port.

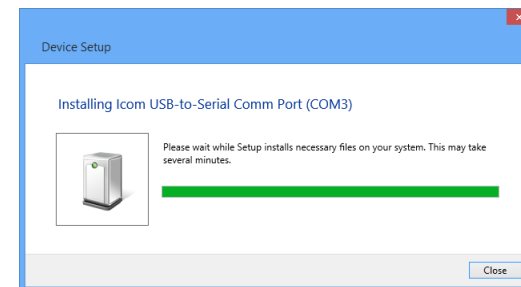

- ③ When the status disappears, the installation is completed. Rebooting the PC is recommended.

## COM PORT CONFIRMATION (STEP 3)

 
After the driver installation has completed, confirm the driver availability and the port number. The COM port number is used to set communication with the cloning software.

- ① Select “Desktop” and click the folder icon at the bottom of the screen.
  - The “Libraries” window is displayed




Click

- ② Right-Click [Computer], and then click [Properties], as shown below.
  - The “System” window appears.

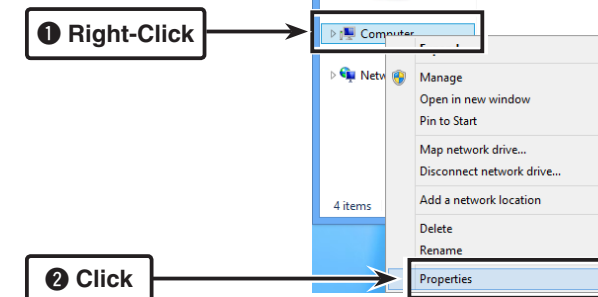


Click

 - ③ Click [Device Manager].
  - “Device Manager” appears.

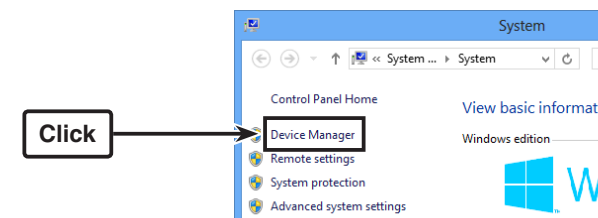

Click

 - ④ Click the “>” next to “Ports (COM&LPT).” Confirm “Icom USB-to-Serial Comm Port (COM\*)” is displayed.
  - In this example, the COM port number is “3.”

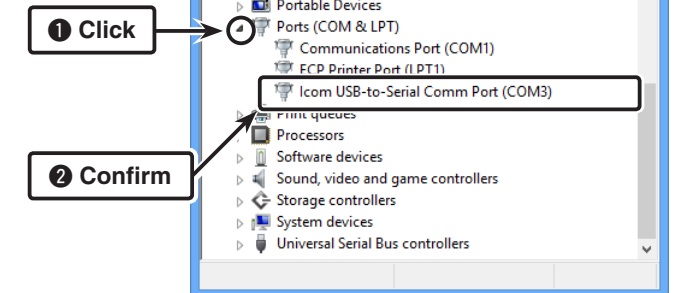

Click

Confirm

- If the COM port number is not displayed, or several numbers are displayed at the same time like “Icom USB-to-Serial Comm Port (COM\*)(COM\*),” the driver may not be properly installed. In such case, uninstall the USB driver and install it again.
- You can uninstall the program using the “Uninstall a program” in the Windows Control Panel.

## DISPOSAL



The crossed-out wheeled-bin symbol on your product, literature, or packaging reminds you that in the European Union, all electrical and electronic products, batteries, and accumulators (rechargeable batteries) must be taken to designated collection locations at the end of their working life. Do not dispose of these products as unsorted municipal waste. Dispose of them according to the laws in your area.

Icom, Icom Inc. and the Icom logo are registered trademarks of Icom Incorporated (Japan) in Japan, the United States, the United Kingdom, Germany, France, Spain, Russia, Australia, New Zealand, and/or other countries.  
 Adobe and Reader are registered trademarks of Adobe Systems Incorporated in the United States and/or other countries.  
 Microsoft, Windows and Windows Vista are registered trademarks of Microsoft Corporation in the United States and/or other countries.  
 All other products or brands are registered trademarks or trademarks of their respective holders.